

# GOOSENECK TOP - TOP MOUNTED

Mounting

---

A

GOOSENECK  
TOP - TOP  
MOUNTED


# GOOSENECK TOP - TOP MOUNTED

Mounting


A

## GOOSENECK TOP - TOP MOUNTED

**GN23A** 23" Style A Gooseneck

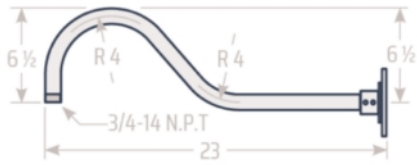


**GN17A** Gooseneck Style A - 17in

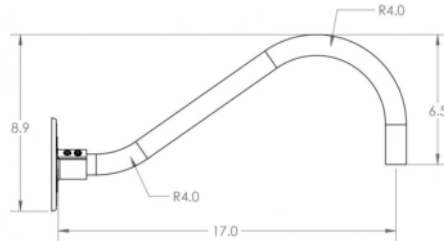


**GN48B** 48" Style B Gooseneck




**GN30C** 30" Style C Gooseneck

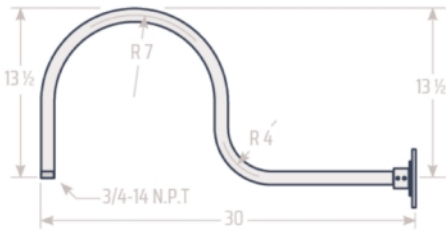


**GN24D** 24" Style D Gooseneck

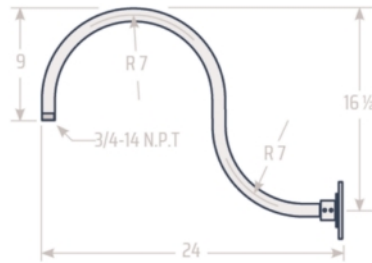


**GN40E** 40" Style E Gooseneck

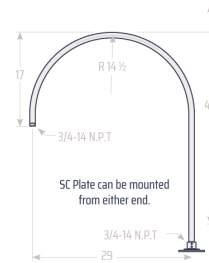


**GN56F** 56" Style F Gooseneck

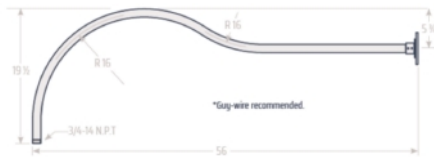


**GN32G** 32" Style G Gooseneck

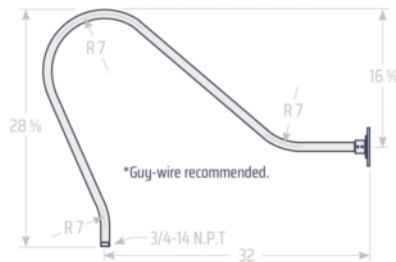


**GN22H** 22" Style H Gooseneck

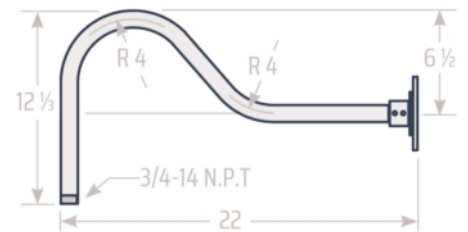

**GN25J** 25" Style J Gooseneck

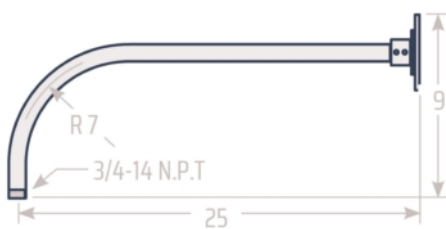

**GN10K** 10" Style K Gooseneck

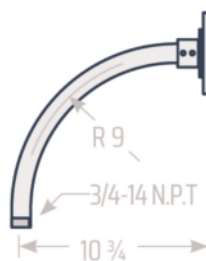

**GN41P** 41" Style P Gooseneck





# GOOSENECK TOP - TOP MOUNTED

Mounting

