


# INSTALLATION INSTRUCTIONS FOR 640 CANOPY PENDANT MOUNT

- 1) TURN OFF POWER.
  - 2) ATTACH MOUNTING STRAP TO OUTLET BOX WITH SCREWS PROVIDED.
  - 3) SLIP WIRE FROM SOCKET THROUGH TO TOP OF STEM
  - 4) ATTACH GROUND WIRE TO GREEN GROUND SCREW AND CUP WASHER ON BOTTOM OF STRAP.
- NEVER CONNECT GROUND WIRE TO BLACK LINE OR WHITE NEUTRAL POWER SUPPLY WIRES.
- 5) MAKE WIRE CONNECTIONS (CONNECTORS NOT PROVIDED.) REFERENCE WIRING DIAGRAM BELOW AND WIRE ACCORDINGLY.
  - 6) PUSH CANOPY TO CEILING AND SLIDE

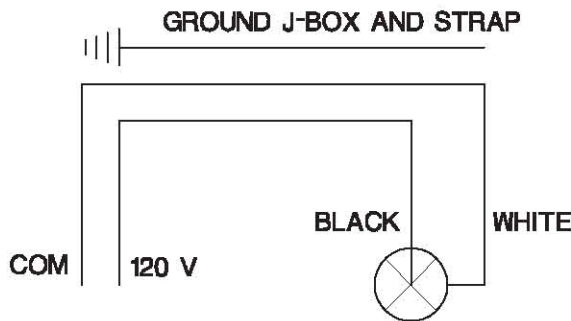

(2) STEEL LOCKNUTS  
No. Z-F NTL 12 (1/2" STEMS) OR  
No. Z-F NT 41 (3/4" STEMS)

STEEL CONDUIT STEM  
THREADED BOTH ENDS  
1/2-14 N.P.T. OR 3/4-14 N.P.T.  
LENGTH AS SPECIFIED

CAST ZINC NUT  
No. Z-C-91

FIBER GASKETS  
No. Z-G-10

TYPICAL RLM  
REFLECTOR

CAST ZINC MOUNTING FLANGE  
WITH INSIDE HUB THREADS FOR  
STEM AND N.P.S. OUTSIDE  
THREADS FOR CAST NUT  
No. Z-C-93 (1/2" THREADS) OR  
No. Z-C-147 (3/4" THREADS)  
3/8" STEMS USE No. Z-E 30  
REDUCING BUSHING

CENTER SOCKET RING GASKET  
No. Z-G-17 (MEDIUM BASE) OR  
No. Z-G-59 (MOGUL BASE)

BOTTOM PORTION OF SOCKET

OUTLET BOX MOUNTING STRAP  
No. Z-S-1 FOR 3/8" STEMS OR  
No. Z-S-4 FOR 1/2" STEMS OR  
No. Z-S-5 FOR 3/4" STEMS

GREEN GROUND SCREW  
No. Z-F GRND SCR 1  
WITH BRASS CUP WASHER No.  
Z-F WCUP 1

(2) STRAP MOUNTING SCREWS  
8-32 X 1-1/4" PHILIPS PAN  
HEAD No. Z-F SCR 213

POWDER COATED CANOPY  
No. Z-H-254 FOR 1/2" STEMS OR  
No. Z-H-255 FOR 3/4" STEMS OR  
No. Z-H-309 FOR 3/8" STEMS

ALUMINUM SLIP RING  
No. Z-F CHOKE-3/8" (3/8" STEM) OR  
No. Z-F CHOKE-1/2" (1/2" STEM) OR  
No. Z-F CHOKE-3/4" (3/4" STEM)  
WITH 8-32 SET SCREW No. Z-F SCR 123

FIBER GASKET DISK  
No. Z-G-25 (MEDIUM BASE) OR  
No. Z-G-60 (MOGUL BASE)

TWO PIECE FRONT WIRING SOCKET  
PORCELAIN KEYLESS PART No.  
Z-SK 7 (MOGUL BASE) OR  
Z-SK 8 (MEDIUM BASE)