


# ASSEMBLY INSTRUCTIONS FOR ECF FLUORESCENT LAMP ENCLOSURE WITH WIRE LEADS OR CORD MOUNT

- 1) ATTACH FIXTURE TO STEM OR CONNECT CORD TO CANOPY. MAKE WIRE CONNECTIONS ACCORDING TO LOCAL AND NATIONAL ELECTRIC CODES.
- 2) SCREW LAMP INTO SOCKET. SCREW GLOBE INTO FITTER.

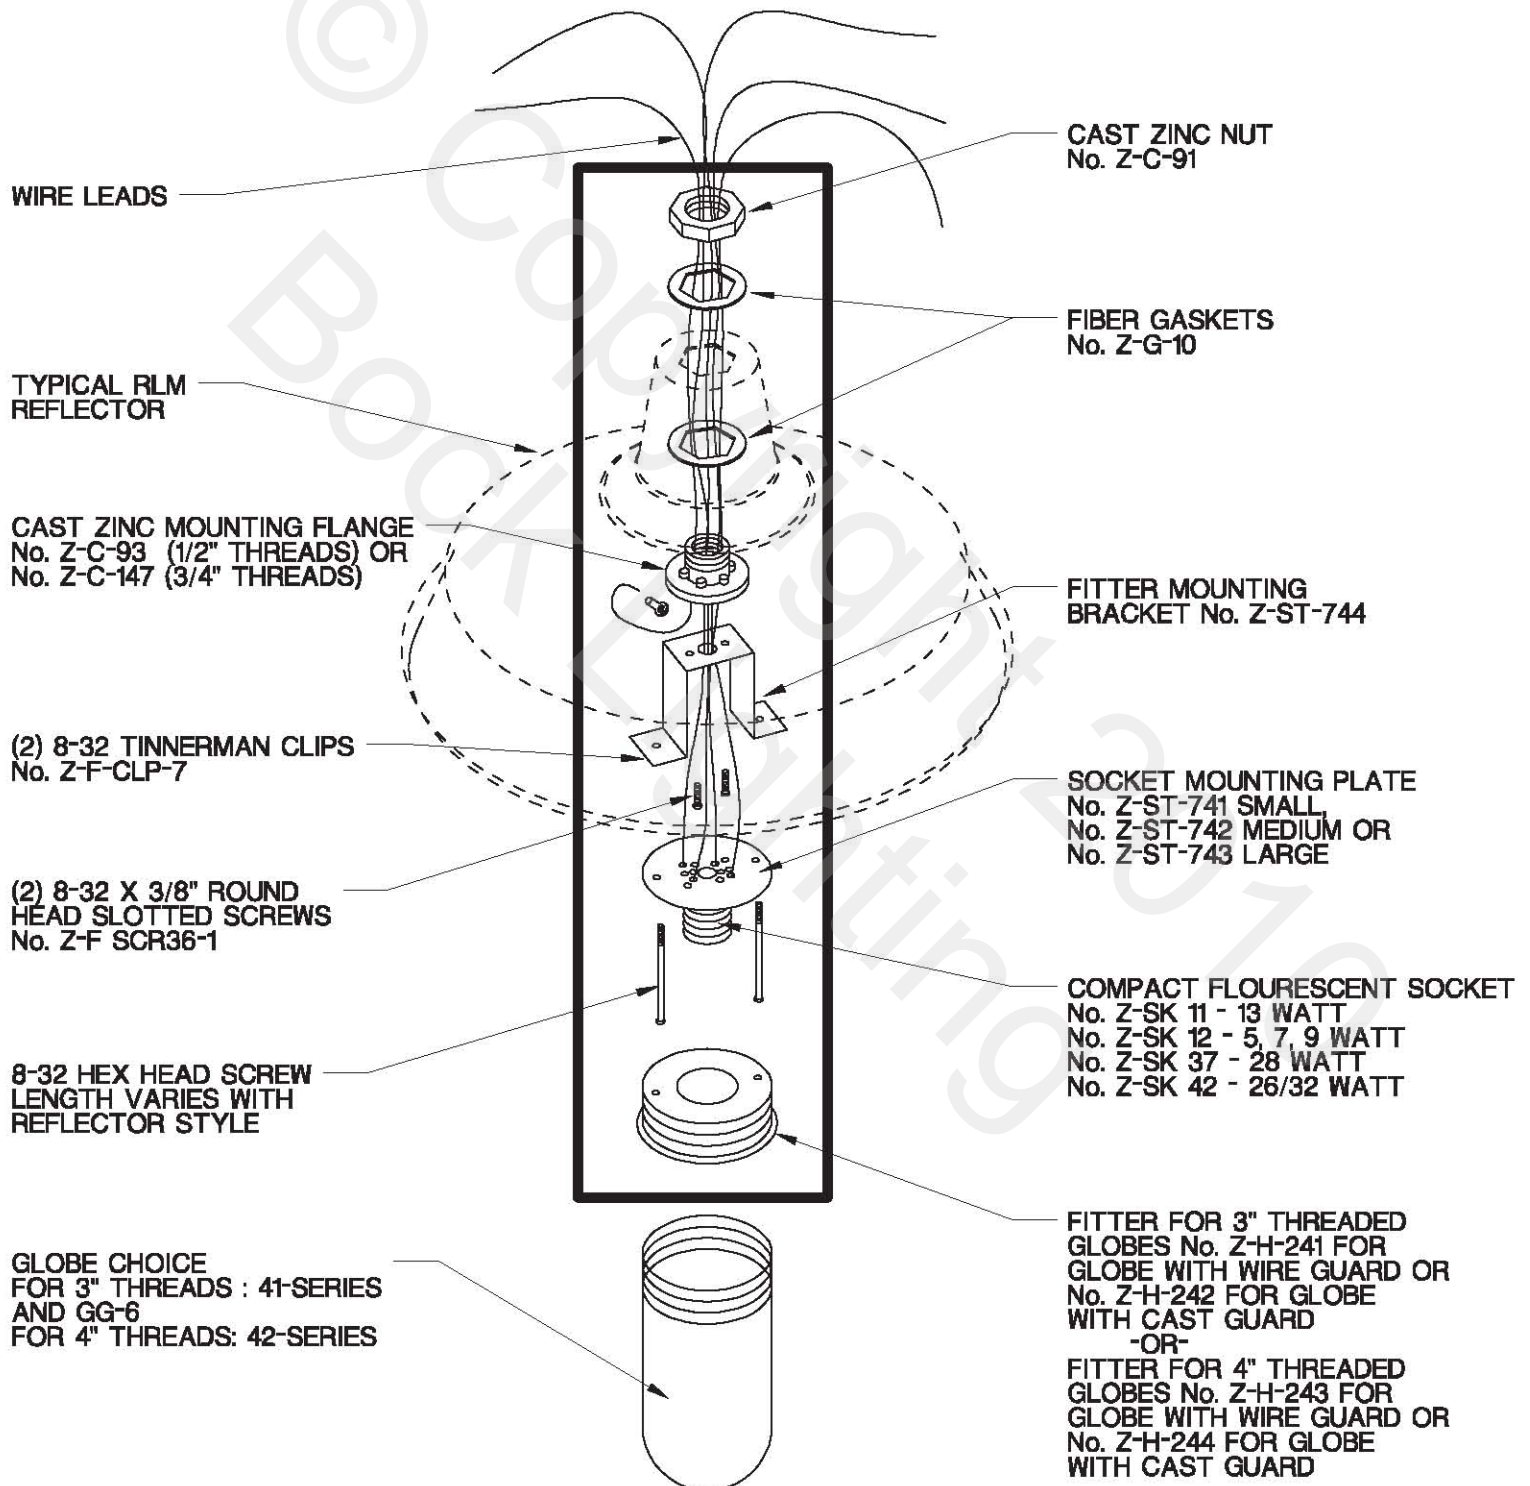

CAST ZINC NUT  
No. Z-C-91

FIBER GASKETS  
No. Z-G-10

FITTER MOUNTING  
BRACKET No. Z-ST-744

SOCKET MOUNTING PLATE  
No. Z-ST-741 SMALL,  
No. Z-ST-742 MEDIUM OR  
No. Z-ST-743 LARGE

COMPACT FLOURESCENT SOCKET  
No. Z-SK 11 - 13 WATT  
No. Z-SK 12 - 5, 7, 9 WATT  
No. Z-SK 37 - 28 WATT  
No. Z-SK 42 - 26/32 WATT

FITTER FOR 3" THREADED  
GLOBES No. Z-H-241 FOR  
GLOBE WITH WIRE GUARD OR  
No. Z-H-242 FOR GLOBE  
WITH CAST GUARD

-OR-  
FITTER FOR 4" THREADED  
GLOBES No. Z-H-243 FOR  
GLOBE WITH WIRE GUARD OR  
No. Z-H-244 FOR GLOBE  
WITH CAST GUARD

WIRE LEADS

TYPICAL RLM  
REFLECTOR

CAST ZINC MOUNTING FLANGE  
No. Z-C-93 (1/2" THREADS) OR  
No. Z-C-147 (3/4" THREADS)

(2) 8-32 TINNEMAN CLIPS  
No. Z-F-CLP-7

(2) 8-32 X 3/8" ROUND  
HEAD SLOTTED SCREWS  
No. Z-F SCR36-1

8-32 HEX HEAD SCREW  
LENGTH VARIES WITH  
REFLECTOR STYLE

GLOBE CHOICE  
FOR 3" THREADS : 41-SERIES  
AND GG-6  
FOR 4" THREADS: 42-SERIES